Fully Automatic Motorised Satellite TV System





User's manual

Customer Help Line: 1300 139 255 Support Email: support@satkingpromax.com.au Website: www.satkingpromax.com.au

www.satkingpromax.com.au

Contents

1. General Information

1-1.	Introduction	2
1-2.	Proper use and Operation	3
1-3.	Safety Notes	4

2. Contents

2-1.	Components Bundle	5
2-2.	Name of parts	б

3. Operating Instruction

3-1.	Connection Diagram	7
3-2.	Functional Description	8
3-3.	Quick Reference	10

4. Program update

4-1.	Connection Diagram for updating	1	1
4-2.	Update Process	12	2

5. Trouble Shooting

5-1.	Trouble Shooting	. 14
------	------------------	------

6. Specifications

6-1.	Dimension	15
6-2.	Specifications	15

7. Camping Car Installation

7-1.	Required space for the SatKing PRO MAX	16
7-2.	Equipment for Installation	18
7-3.	Installation	18
7-4.	Battery connection	22
7-5.	Installation diagram	22

1. General Information

1-1. Introduction

These instructions describe the functions and operation of the SatKing PRO MAX auto skew satellite system.

Correct and safe operation of the system can only be ensured by following these instructions. Your SatKing PRO MAX is an intelligent satellite TV reception antenna system which can align itself towards a preset satellite automatically as long as the system is located within the footprint of the selected satellite.

The SatKing PRO MAX only occupies requisite space while it performs the necessary adjustments with the slim and agile antenna body.

For general operation, please ensure that the system always has a clear view of the Northern Sky. If the satellite's signal beam is interrupted by obstacles such as buildings or trees, the unit will not function and no satellite TV signal will be received.

For more information on general use of this unit consult your local dealer for assistance.



1-2. Proper use and operation

This product has been designed for fixed installation on vehicles with maximum speeds of 130 km/h. It is designed to automatically aim an antenna at geostationary television satellites. The power to the system is supplied by a standard vehicle electrical system with a rated voltage of 12 or 24 Volts DC.

Use of the equipment for any other purpose to the one specified is not permitted.

Please also note the following instructions from the manufacturer:

- It is not possible to add or remove components on this product.
- The use of other components other than those originally supplied.
- When completing Installation you or your contractor must strictly follow all instructions in the supplied User Manual. Failure to follow the user manual may cause damage to the SatKing Pro Max or your vehicle.
- The product does not require any regular maintenance; all service must be carried out at approved service centre's.
- · All relevant guidelines of the automotive industry must be observed and complied with.
- The equipment must only be installed on solid vehicle roofs.
- Avoid cleaning your vehicle with the mounted satellite system in a drive-through car wash or a car wash with a high-pressure cleaner.
- The SatKing PRO MAX comes with a 3 year warranty, for full warranty details please visit our website www.satkingpromax.com.au
- After Sales Support Line 1300 139 255 or support@satking.com.au

1-3. Safety Notes



In order to ensure that your SatKing PRO MAX works properly you must ensure that it is following by the Operating Instructions in this manual and used as intended purpose.

When it is correctly installed, the antenna automatically assumes the rest position when the ignition is switched on and locks itself. If the system cannot fully be removed due to user's negligence, then it is your responsibility to check that the antenna is properly stored in safe.


Please also note that different legal requirements are applied to the operation of electrical and electronic equipment in different countries. As the user of this equipment, you are responsible for yourself ensuring compliance with the relevant laws and regulations. The manufacturer does not take liability for direct or indirect consequential damage of the system, motor vehicles or other equipments by reason of unsuitable battery usage or erroneous installation or wrong wire connection.


2. Contents

2-1. Components Bundle




2-2. Name of parts

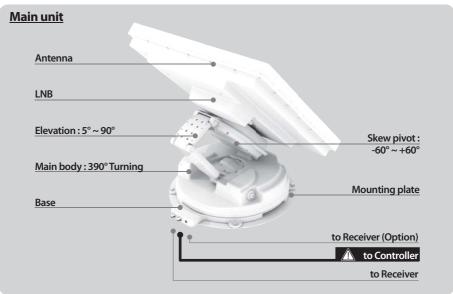

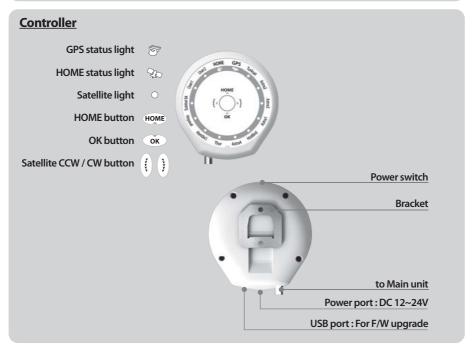

3. Operating Instruction

3-1. Connection Diagram

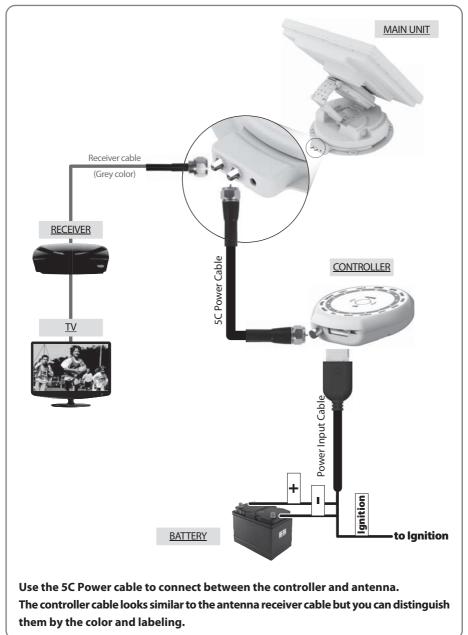

3-2. Functional Description

A. Power On

Function	Description	Operation
	"Power" Switch	i. When the all cable connections are completed, switch on with the "Power Switch" button on the top of the controller.
T	"Home Status" light Stand By "ON"	ii. If the antenna was at home position, "Home status" light will be solid on to show it is ready to use.
$\overrightarrow{\mathcal{B}}_{-} \xrightarrow{\mathcal{B}} \overrightarrow{\mathcal{B}}_{-}$	"Home Status" light Flashing ↓ Turning into "ON"	iii. If the antenna was not in the home position, "Home status" light will flash, and the antenna will return to the home position within a maximum 2 minutes. Then will be solid on.

 The "Home position" means antenna completely folded down to the body part which is the basic position for functioning.

B. Selecting the satellite

Function	Description	Operation
		 Once antenna and controller are connected, you can select & change the satellite as you desire.
	"Satellite CCW / CW button" Light ↓	ii. Select the preferring satellite using the "CCW / CW" buttons, then press the "OK" button to accept the setting.
OK	OK "OK" Button	iii. If you select the wrong satellite, you can re-search target satellite using the "CCW / CW" button, then press the "OK" button to accept the new setting.

C. Searching the satellite

Function	Description	Operation
	"Satellite" light	 i. After the satellite selection, "Home Status" light will go off and the LED light of the selected satellite will start flashing. ii. Once selected satellite has been found, the LED light of the satellite will become solid.

D. Changing the satellite

Function	Description	Operation
	"Satellite CCW / CW button" Light	i. If you want to change desired satellite, you can change the
♦ OK	↓ "OK" Button	target satellite using the "CCW / CW" buttons, then press the "OK" button to select the new satellite.

E. Back to Home position

Function	Description	Operation
HOME	"HOME" Button	 Whenever you wish to return the antenna back to the Home position, press and hold the "Home" button for a few seconds.

F. GPS LED light

Function	Description	Operation
		i. GPS LED confirms the current location from 24 GPS satellites in the world.
C.D	"GPS" light	 When your SatKing PRO MAX identifies a GPS signal, GPS LED light will remain on, regardless if the antenna is pausing or moving. GPS can help to search for the satellite faster & catch the optimum satellite signal, and assist SatKing PRO MAX to acheive the best elevation & skew angle.
		iii. Also, while program updating, the GPS LED light will flash to show the update procedure is processing. During this time, GPS LED light on doesn't mean the unit is communi- cating with GPS satellite.

3-3. Quick Reference

Classification	Description
	1. Switch on with the "Power switch" button on the top of the controller.
	2. Upon power on, all LED will flash twice.
	3. Wait until "HOME Status" light & one "Satellite LED" light, which you set previously or the first satellite in the controller (Turksat), remain solid on.
Operating (Searching the satellite)	4. Select the desired satellite using the "CCW / CW" buttons, then press the "OK" button to select.
	5. IF the satellite LED light starts flashing, please wait for a while until it turns to keep the LED on steadily.
	6. When the satellite LED light stays on, the selceted satellite has been located and a signal can be seen on the satellite TV.



WARNING

NOTE

When you physically move the SatKing Pro Max, the unit must be returned to the home position to prevent damage to the unit.



SatKing PRO MAX will be automatically folded back to HOME position if the vehicle moves faster than 10km/h, when the reception of GPS is stable.

4-1. Connection Diagram for updating

** The SatKing PRO MAX is pre-programmed with the relevant satellite's information. Upgrades are only required if the satellite providers change their technical parameters.



"USB port is used for firmware upgrade only"

Simply connect the Controller to PC using USB cable. USB cable is not included in the package.

4-2. Update Process

Using SatKing PRO MAX Update Program, refresh the satellite data of your SatKing PRO MAX.

i. Update Program download

- Download the SatKing PRO MAX Update Program to your PC from our website (www.satkingpromax.com.au).
 * Download driver file, if your OS doesn't support the update program.
- 2 Download the newest satellite data to your PC from our website .
 ※ Be sure your product location and download correct location file.

Software upgr	ade Concept I	Key Faaturiis 📋 Opera	due Approxime	900	Sabears oppo
Download					
	SWPE	formerented .	CITATION		
	ribqage buokasa	Deterts probait.	Contraction		
	Satulite data	Ampropriate .	Course of		
	Second Cata	Deversion product	Contraction	0	Thul
	USB driver file		CONTRACTOR	0	8

③ Connect the controller to your PC using USB cable, then install the SatKing PRO MAX Update Program you downloaded.

ii. Update the 10 satellites which are pre-stored

④ Run the SatKing PRO MAX update program.

(5)

Click "file" on left-upper side on program, and click "open" to select folder which contains downloaded satellite data.

6

Select folder and click the "OK" button.

⑦ When folder is opened, select file and click the "Open" button.

open save PORT SE	2m	BROG	IRAM VI.	02			
(HOULE		57600		COP	INECT	DI	SCONNECT
TURKSA 420	T TP1	Nid	Freq	Symbol	Pol	THOR 3592	TP1
ASTRA 2		Nid	Freq	Symbol	Pol	AB3	NI



- ⑧ The data of 10 satellites are shown to you, but they are not modifiable by yourself.
- ④ Check the Port Setting, then click the "CONNECT" button.

file								
SNIPE	UPDATE	E PROGE	AM V1.0	2				
PORT SE	TTING	6						-
1001221		57600		CON	INECT	0mm	DISCONNE	CT
TURKSA 420	т	Nid	Freq	Symbol	Pol	Su.		Nid
40.0	[7] TP1	42	11996	27500	YER	Y	E INT	
	[J] TP2	42	11593	27500	VER		[] TP2	
	[2] TP3	42	11746	27500	ноя		[Z] TP3	
ASTRA 3	2	Nid	Freq	Symbol	Pol	AB3		Nid

Once "SEND_DATA" button is activated, click the "SEND_DATA" button.

_							_
CON	NECT		SCONNE	ECT		SEND_D	ATA
		Freeview	(NZ)		_		(mm
Symbol	Pol	3592		Nid	Freq	Symbol	Pa
27500	VER	3036	[7] TP1	1536	12265	28000	VEN
27500	VER		TP2	1536	12188	29000	VER
27500	HOR		[7] TP3	70	10009	24500	VER
		USER 1				-	
Symbol	Pol	3550		Nid	Freq	Symbol	Pol

- Wait until green bar reaches to the end and "Send OK" message box is popping up.
- Once "Send OK" message box is shown, update is completed.

ASTRA 3						HISPASAT	
235		Nid	Freq	Symbol		3300	Nid
	7 TPL	-	3 12160	27500	VER	[2] TP	
	snip	e_update_v	4_ 3	17500	VER	(Z) TP	2
	2			27500	VER	E TP	1
ASTRA 1	5	nd OK	- 1			USER 1	
192				Symbol	Pol	90	Nic
132	3	-		22900	VER	[2] TP	
			OK C	22000	HOR	E TP	2 E
	THE		- Yu	22000	VER	[2] TP	1 E
HOTBIRD			1	2		USER 2	
130		Nid	Freq		Pol	1160	Nid
	2 TP1	31	8 12149	27500	YER	ETTP	1
			1 19550	275.00	VEB		

iii. Update USER 1~2

- USER 1~2 are for extra addition of your desired satellites which are not pre-stored.
- After download the SatKing PRO MAX update program, start it. Then tick the box on USER 1~2 which you wish to update, and write the satellite data in the box by yourself. Then follow the procedure from ⁽⁹⁾ as above.

USER 1		Nid	Freq	Symbol	Pol
1160	V TP1	173	11747	21300	HOR
	TP2	173	11785	21300	HOR
	V TP3	173	11823	21300	HOR
USER 2					
		Nid	Freq	Symbol	Pol
	🔄 TP1				
	TP2				
	TD3		1	(r	

• To get detailed information of satellite data, please contact your local distributor.

NOTE

Do not turn off the power or disconnect the cable before the update process is complete.

To find out more about how to update the SatKing Pro Max go to our website www.satkingpromax.com.au

5. Trouble shooting

There are a number of common issues that can affect the signal reception quality or the operation of the SatKing PRO MAX. The following sections address these issues and potential solutions.

A. No function when you power on the Controller

- i. Check again all the cable connections have been made correctly.
 - ✓ Connection between the power and controller
 - ✓ Connection between the controller and the antenna. Make sure that the right port of the antenna should be connected to the controller.
- ii. Check if the power input cable has been damaged.
- iii. Check car battery polarities(+/-) and ignition of power input cable.

B. Fail to search the selected satellite

- i. Satellite signals can be blocked or degraded by buildings, trees. Make sure there are no obstructions in a northerly direction.
- ii. Check your program of Controller often, and get the latest updates for your SatKing PRO MAX.

C. Mechanical problems


- i. If the antenna does not move into desired position.
 - \checkmark Try to power OFF/ON again.
- ii. If the antenna makes a noise whilst remaining static.
 - \checkmark Try to power OFF/ON again. If problem persists, please contact your local distributor for assistance.

D. Other issues

i. If the system has been improperly wired, it will not operate properly. Contact your local distributor for assistance of cable damage.

6. Specifications

6-1. Dimension

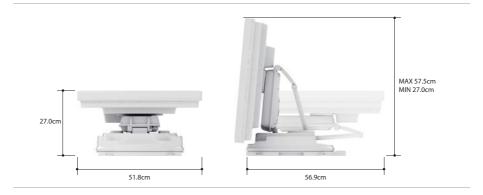


6-2. Specification

MODEL NAME	SatKing PRO MAX
Weight	19.6 kg
Work Condition	Stationary
Polarization	Linear (Horizontal / Vertical)
LNB Output	Dual Output
LNB Input Frequency	11.7 ~ 12.75 GHz
LNB Output Frequency	1000 ~ 2050 MHz
Angle Range	(EL) 5° ~ 90° / (AZ) 390° / (SK) -60° ~ +60°
Satellite Searching Time	120 seconds (average)
Power Requirement	DC 12~24V
Power Consumption	84W (in searching)
Operating Temperature	-30°C ~ +60°C


7. Camping Car Installation


7-1. Required space for the SatKing PRO MAX

Please allow that there is enough space around the SatKing Pro Max for flat antenna section to complete a full 360° scan of the sky and return to the home position.

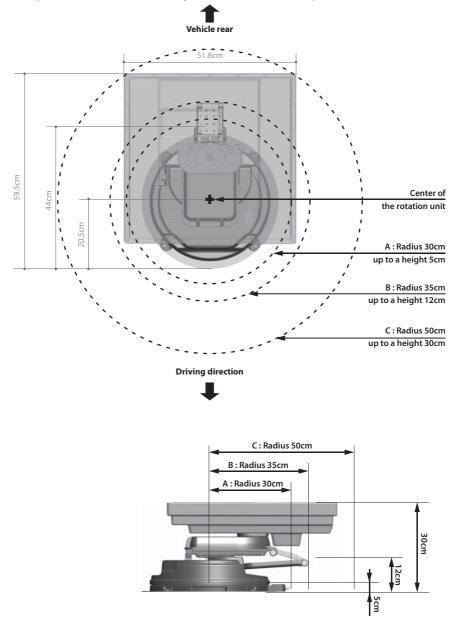

7-2. Equipment for Installation

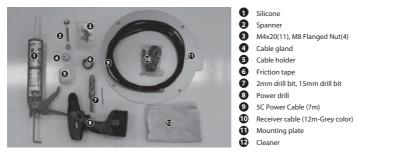

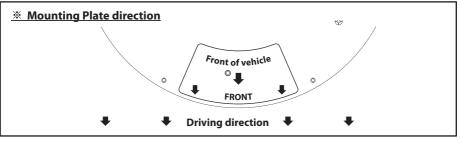

7-3. Installation

A. Mounting plate Installation on the vehicle roof



Clean the surface with cleaner



Attach friction tape outside of the mounting plate by 4mm away from plate edges



Locate mounting plate in the center of vehicle roof



Put aside the mounting plate to apply silicone within the guided tape line but leave 2cm gap from the line

B. Assemble 6pcs of M4x20 bolt at the fix bracket




Put back the mounting plate on the silicone applied and make 6holes (2mm) with power drill





Apply silicone on the holes

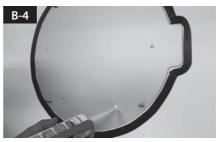

Assemble bolts

Re-apply silicone to cover bolts assembled

C. Apply siliconebetween fix bracket and friction tape



Apply silicone around mounting plate



Remove friction tape and get dry



Tidy the area silicone applied



The image you will see. Place main unit on the top of fixed plate

D. Fix the mounting plate with 4 pcs of bolts using spanner





E. Cable holder installation 1



Equipment to initiate Cable holder installation



Insert cables like picture



Arrange cable holder in front of (30cm apart from) antenna center by facing open side of cable holder toward projected part of the mounting plate. Then attach friction tape outside of cable holder



Make 15mm drill hole in the center of the tape marking



Insert Receiver & 5c Power cable through the hole

F. Cable holder installation 2



Place cable holder in the tape marked and make 3 of 2mm drill holes



Fix cable holder on the car roof with 3 of M4x20 screws



Tidy silicon



Apply silicone around cable holder



Apply silicone around and on the top of screws



Remove friction tape




G. Connect 5C cable to the controller(middle) and grey cable to the receiver(Left)

7-4. Battery connection



Power Input Cable

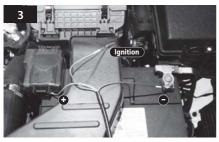

Use Power Input Cable to Connect Car Battery (+/-Polarities have to be matched) and Ignition Terminal



Fix the Controller Bracket




Check the Polarity of Car Battery (+/-)



Use Power Input Cable and 5c Power Cable to Connect to Controller



Place the Controller at where you want

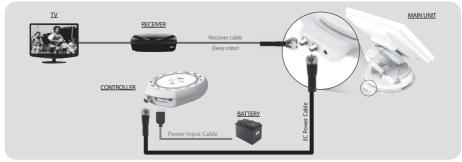

7-5. Installation diagram

